



**Pair with RF receiver (Method 2)**



- Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:** Click ON/OFF button to activate the remote.
- Step 3:** Power off and power on the receiver.
- Step 4:** Choose and click a zone number (zone 4, e.g.) twice, then press and hold it continuously and quickly within 10 seconds. LED lights connected with the RF receiver flicker three times means the receiver is paired with zone 4 successfully.

**Έλεγχος ροοστάτη αφής CCT RF για φωτισμό LED έως 4 ζώνες - SUNRICHER - Perfect RF**

**Ref. SR-2819S-CCT**

Ο ελεγκτής θερμοκρασίας χρώματος LED SR-2819S-CCT είναι ένα τηλεχειριστήριο που προσφέρει γρήγορη και ακριβή ρύθμιση της θερμοκρασίας χρώματος και ανεξάρτητη ρύθμιση της φωτεινότητας για κάθε στόχο. Σχεδιασμένος με έναν απτικό τροχό χρώματος, ο ελεγκτής θερμοκρασίας χρώματος μπορεί να ρυθμίσει τη θερμοκρασία χρώματος για φυσικά λευκά, θερμά λευκά και ψυχρά λευκά LED.

**Pair with RF receiver (Method 1)**



- Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).
- Step 2:** Click ON/OFF button to activate the remote.
- Step 3:** Click the "learning key" button on RF receiver over power on the receiver three times continuously to set it into pairing status.
- Step 4:** Choose and click a zone number (zone 4) e.g.
- Step 5:** Touch the color wheel. LED lights connected with the RF receiver flicker three times means the receiver is paired with zone 4 successfully.

**Product data**

Onomastikh tash (V)	4,5V/DC
Aisthitíras	Όχι
Euros anixneushs (m)	25000
Diastaseis (mm) LxLxh	120X55X17mm
Yliko	Plastiko
Exoterikí chrísi	ochi
IP	IP20
Diarkeia zwhs (h)	35000
Kathgoria energeiakhs apodoshs	A+ (2021)
Pistopoihtika	EK, ROHS
Egyghsh	Symfwna me th nomikh egyghsh: 3 eth
Elegxos xrwmatos	CCT

